


RevoSet® reset-chip for Brother toner TN243 / TN247 of these printers:

1/1

DCP-L 3210 / DCP-L 3230 / DCP-L 3270 / DCP-L 3280
 DCP-L 3510 / DCP-L 3517 / DCP-L 3550 / DCP-L 3710
 DCP-L 3730 / DCP-L 3740 / DCP-L 3750 / DCP-L 3770

REMARK: The initial toners (which were sold with the new printer) cannot be reset, as they do not have a gear (see below).

Good for original cartridges as well as compatible cartridges:

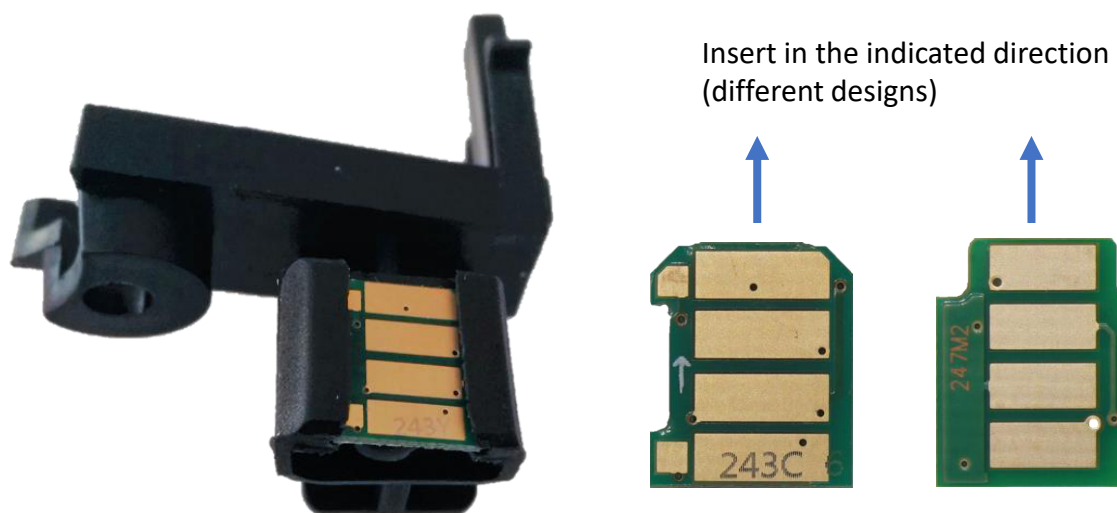

Instructions:

1. There are toner cartridges TN-243 and TN-247. However the chips look the same. Still they have different yields, just like the OEM products. First of all, check if you have the right chip. You can find the name of the compatible cartridge on the label of the packaging.
2. Please take note of the intended colour of the chip. All chips are only suitable for the specified toner color. This is written on the label and usually you can also find a letter Y, M, C or K (black) marked on the gold contacts (in the example above, 'C' stands for cyan).
3. **IMPORTANT:** Reset the gear

With these toners, a small 'gear' has to be mechanically reset. Reset-Chips24 does not have own instructions for that but we have linked a freely available video on our online shop at reset-chips24.com. To show the video, please click on [So funktioniert's](#) in the footer. Besides other instructions and videos, you'll also find this video. From minute 6:35 onwards resetting the gear is shown.